

# AD-A266 965

## IR - RAT **Infrared Remote Activity Transceiver Universal Model**

William Sands, Robert Thibadeau, Drew Anderson **Imaging Systems Laboratory** April, 1993 **CMU-RI-TR-93-12** 

> The Robotics Institute Carnegie Mellon University Pittsburgh, Pennsylvania 15213



Copyright © 1993 William Sands, Robert Thibadeau, Drew Anderson

This research was partially sponsored by the Defense Advanced Research Projects Agency (DOD) ARPA order 6873, under contract #MDA972-92-J-1010. The views and conclusions contained in this document are those of the authors and should not be interpreted as representing the official policies, either expressed or implied, of the Defense Advanced Research Projects Agency or the US Government.

Approved for public release Distribution Unlimited

93 7 12 022

93-15796

### REPORT DOCUMENTATION PAGE

Form Approved
OMB No. 0704-0188

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Washington Headquarter's Sentices, Directorate for information Operations and Reports, 1215 Jefferson Davis Holdway Suite 1204 Africation 19, 2202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (2014-0188), Washington, D. (2003)


Davis Highway, Suite 1204, Arlington, VA 22202-4			
1. AGENCY USE ONLY (Leave blank)	3	3. REPORT TYPE AND	DATES COVERED
4. TITLE AND SUBTITLE	April 1993	technical 5	. FUNDING NUMBERS
IR-RAT: Infrared Remote A Universal Model	Activity Transceiver		MDA972-92-J-1010
. AUTHOR(S)			
William Sands, Robert Thil	padeau, and Drew Anders	son	
PERFORMING ORGANIZATION NAME	NE(S) AND ADDRESS(ES)	8	. PERFORMING ORGANIZATION REPORT NUMBER
The Robotics Institute			
Carnegie Mellon Universit	ty		CMU-RI-TR-93-12
Pittsburgh, PA 15213			CMO IG TR-75 12
. SPONSORING / MONITORING AGEN	ICY NAME(S) AND ADDRESS(ES	5)	0. SPONSORING / MONITORING AGENCY REPORT NUMBER
DARPA			
		<i>·</i>	
11. SUPPLEMENTARY NOTES			
2a. DISTRIBUTION - AVAILABILITY ST	ATEMENT	[1	2b. DISTRIBUTION CODE
Approved for public releas Distribution unlimited	е;		
3. ABSTRACT (Maximum 200 words)			
The IR-RAT was developed as tremote control interface. This do the future.			
4. SUBJECT TERMS			15. NUMBER OF PAGES
. <del></del>			31 pp
			16. PRICE CODE
7. SECURITY CLASSIFICATION 118	. SECURITY CLASSIFICATION	19. SECURITY CLASSIFICA	TION 20. LIMITATION OF ABSTRAC
OF REPORT	OF THIS PAGE	OF ABSTRACT	
unlimited	unlimited	unlimited	unlimited

## TABLE OF CONTENTS

List of	f Figure	es	5		
Abstra	act		7		
1.0 In	troducti	ion	9		
	1.1	Conventions	9		
2.0 Ha	ardware	e design	10		
	2.1	Microcontroller	10		
	2.2	Memory	10		
	2.3	Serial Interface	10		
	2.4	Power	11		
	2.5	Reset Switch	11		
	2.6	Power Indicator	11		
	2.7	Infrared Receiver	11		
	2.8	Infrared LED	11		
	2.9	Jumpers	12		
	2.10	Misc.	12		
3.0	Softw	vare (Firmware) design	13		
	3.1	Current Version	13		
	3.2	Infrared Signal Format	13		
	3.3	Misc.	14		
Apper	ndix A	- Schematic Diagrams	15		
Apper	ndix B -	- Connector Diagrams	19		
Apper	Appendix C - Single Chip Mode Board Modification 20				
Anner	ndix D.	- Source code for EPROM ready version	21		

## List of Figures

Figure 1.	IR Representation of character A
Figure A-1.	Schematic Diagram - Microcontroller
Figure A-2.	Schematic Diagram - Memory
Figure A-3.	Schematic Diagram - I/O
Figure A-4.	Schematic Diagram - Power
Figure B-1.	Modular Jack Diagram
Figure C-1.	Single Chip Board Modification

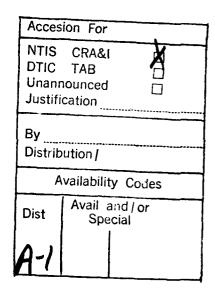

DTIC QUALITY INSPECTED 5

### **ABSTRACT**

The IR-RAT was developed as the result of a need to remotely control computers. It is a microcontroller based infrared remote control interface. This document describes its design and operation so that it might be used or altered for use in the future.

#### IR - RAT

### InfraRed Remote Activity Transceiver

#### 1. Introduction

The IR RAT was developed and designed at Carnegie Mellon as the result of a need to use an IR remote control to operate computer software on several platforms. Therefore, the computer-RAT interface was made to be as simple as possible to allow for the most flexible use among different computers. The design and code information is publicly available. The end result of the design is a small box with the following features...

- Motorola 6811 microcontroller
- 8k x 8 EPROM for code and data storage
- Space for 8k x 8 RAM for software development
- 40 Khz carrier based IR receiver
- IR-LED capable of transmitting up to a 60 Khz carrier
- Standard RS-232 serial interface
- Powered from a 9V DC adaptor

The intended use for this box is to act as an IR remote control interface for any computer. It was designed to teach a learning remote a set of commands which, when sent by the learning remote, would cause a command to be sent to the host computer via the serial port. While this is the application for which the RAT is programmed, it could conceivably be used for a wide variety of applications. These include control by any 40 Khz carrier based IR remote control and control of virtually any IR remote capable device.

This document is intended to explain the design and implementation of the RAT so that others can understand its functionality and possibly adapt it to meet their own needs.

#### 1.1 CONVENTIONS

Throughout this manual figures which represent hexadecimal values will be preceded by a \$\\$, values which represent binary values will be preceded by a \$\%\$, and decimal values are not

preceded by any character.

## 2. Hardware design

#### 2.1 MICROCONTROLLER

The IR RAT is based upon the Motorola 6811 family microcontroller. These are fairly general purpose 8-bit microcontrollers that are readily available. Most of the 6811 microcontrollers that are available in a 52 pin PLCC or ceramic quad pack are useable. For development, the MC68HC11A8FN1 was used to take advantage of the built in buffalo monitor that aided in development and debugging. For final production, a less expensive MC68HC11A0FN is used, as there is no need for internal EEPROM or masked ROM. In volume a masked ROM or EPROM version of the 6811 would be most suited as the code could easily fit in the 8 to 12 kBytes of ROM available. This eliminates the need for external support components as well as simplifying production.

#### 2.2 MEMORY

On the IR-RAT board there are provisions to support one 8k x 8 EPROM and one 8k x 8 static RAM. The EPROM used is a 2764 or compatible unit in a 600 mil wide DIP package. The EPROM is assigned to the address range \$E000-\$FFFF in the 6811s addressing space as this corresponds to the ROM space that is used for most int rnal ROM/EPROM configurations on the 6811.

Space is provided on the IR-RATs PC Board for a 300 mil wide 8k x 8 static RAM. This RAM was intended for software development only as it is physically mounted underneath the EPROM. The RAM is assigned to the \$6000-\$7FFF address space.

#### 2.3 SERIAL INTERFACE

The IR RAT is designed to communicate with the host computer via the serial port. This is pivotal in allowing the device to be used with as many different systems as possible. The RS-

232 signals are generated and received through the built in serial communications interface on the 6811 with signal levels supplied by a Maxim MAX-232 driver. The modular jack on the IR-RAT conducts the RS-232 signals. See the attached diagrams for the pinout of the modular jack.

#### 2.4 POWER

Power can reach the IR RAT in one of two ways. First, the DC coaxial jack can be used to attach a 9V DC adaptor with a positive center conductor. Second power can be supplied through the outer two conductors in the modular phone jack. As shown in the schematics, each of these power sources pass though separate barrier diodes to prohibit any he mful connections. For pinouts of the modular jack see the attached diagrams.

#### 2.5 RESET SWITCH

There is space on the IR-RAT board adjacent to the modular connector for a reset pushbutton switch, S1. This is a normally open push-button switch that resets the microcontroller. The switch is debounced through the reset controller, U7. This switch appears only on development units, as final production units should not need a reset circuit. The software should be robust enough to avoid the need for an external reset.

#### 2.6 POWER INDICATOR

LED D4, and resistor R5 are only necessary on development units to indicate presence of power.

#### 2.7 INFRARED RECEIVER

The IR receiver is the Sharp GP1U52Y, which is a receiver/demodulator that detects the presence of a 40 Khz carrier. This connects to port A, bit 2, which is also the Timer Input Capture 1. This signal has a high resting state and becomes low only when a 40 Khz carrier is detected.

#### 2.8 INFRARED LED

D1 is an IR LED that is designed to transmit IR signals. It is controlled directly by the output of I/O port A, bit 3. As a result, it can be controlled by the timer output compare 5 (TOC5).

When this value is high, the LED is on. For development, resistor R3 should be approximately 100 ohms to limit the current that the LED can draw. When it is shown that the LED will operate only at some reduced duty cycle (i.e. 50%) then a lower value can be used (approx. 50 ohms) to allow for a more powerful IR signal. This should occur only when the program is sure not to cause the LED to stay on for extended periods (as the Motorola buffalo monitor does).

#### 2.9 JUMPERS

There are five jumpers on the IR-RAT PC board. Jumper 1 (the left most jumper) is used to place the chip in expanded multiplexed mode (jumper removed) or in special test mode (jumper present). In order to operate the microcontroller in single chip mode, hold the MOD A line low. This is accomplished by cutting the trace which connects jumper 2 to the pull up resistor network, and reattaching the non-grounded side of the jumper to the pad on the pull up resistor network that connects to MOD A (Pin 5). Then by putting a jumper across jumper 2, and leaving jumper 1 vacant the microcontroller is placed in single chip mode. See the attached diagram for the procedure.

The remaining four jumpers are attached to port E, pins 0-3. Pin 3 corresponds to jumper 5, pin 2 to jumper 4, pin 1 to jumper 3, and pin 0 to jumper 2. These are provided to allow for jumper selectable options. Note that use of the Motorola buffalo monitor requires that jumper 5 be installed. If it is not in place the buffalo monitor will attempt to start execution from the EEPROM at address \$B600.

#### 2.10 MISC

If an EPROM version of the 6811 (i.e. 68HC711) is available and desired for use, it is possible to reduce the part count on the board significantly. Assuming that there is no need for the RAM, the address decoding and bus latching chips, U2 and U3 can be eliminated. This is also possible if a ROM masked version of the microcontroller is manufactured.

The PC boards were fabricated by Photobeam/Brookside in Waltham, Massachusetts. Most of the other parts are commonly available from a variety of electronic vendors. The only specialized part was the Sharp IR received/demodulator.

### 3. Software (Firmware) Design

#### 3.1 CURRENT VERSION

The current version of the firmware available for the IR-RAT performs two very simple functions. The first is that it gets an ASCII character from the serial port and then encodes and transmits that character as an IR signal. This is the transmitter portion of the code. The second function is it receives IR signals from a remote control and if they are in the appropriate format, decodes the ASCII character the signal represents and send that character over the serial port to the host computer. This is the receiver portion of the code. While the code is fairly self explanatory, some brief explanation is required.

#### 3.2 INFRARED SIGNAL FORMAT

The IR signal is created by turning the 40 Khz carrier on and off for different periods of time. The periods of time are measured by the number of cycles of the 40 kHz carrier. The current encoding scheme uses two values for the periods, these are 200 cycles (long) and 20 cycles (short). By using an order of magnitude difference, determination of which value is correct becomes trivial.

IR signals from the RAT are composed of four parts, the sync, the header, the data and the inverted data. The sync is a long on pulse. This allows the receiver to "wake up" and the microcontroller time to prepare for receiving data. Once the sync pulse has been sent, all of the remaining periods of carrier presence (when the IR LED is flashing) are short, and the data is determined by the length of time that the LED is not flashing. Therefore a short is considered to be 20 cycles of no IR activity followed by 20 cycles of 40 kHz carrier and a long is 200 cycles of IR inactivity followed by 20 cycles of 40 kHz carrier.

After the sync pulse is sent, a header is sent to identify the signal as a valid RAT signal. This is a short-long-short pattern. If the decoder does not see this pattern after it receives the sync, it assumes that the IR signal is from some other source and waits for the next signal.

Next the eight bits of data representing the ASCII character are sent from least to most significant. A one is represented by a short signal and a zero is represented by a long signal. Following this the data is sent again, except this time the representation is inverted with a one

represented by a long signal and a zero represented by a short signal. By using this method, all characters sent will take exactly the same amount of time. An example of the IR signal representing the letter A (%01000001) is shown in figure 1.

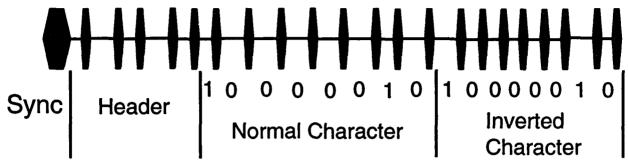



Figure 1 - IR Representation of character A (%01000001). Note that this is not to scale. In reality long and short times vary by a factor of 10.


#### **3.3 MISC**


There are a few notes that need to be made about the current firmware for the RAT. First it is interrupt based. When the program initializes it sets registers appropriately and then waits for an interrupt to occur, either from the serial communications interface or the timer input capture 1.


Second, the IR RAT depends on relocating the internal RAM to location \$1000 and the configuration registers to start at \$0000. This is done to permit the tight loops necessary to generate a 40 kHz carrier using a 2 MHz crystal and the internal timers on the 6811.

Finally, the program operates in batch mode. When transmitting the program computes all of the timing in advance and then starts the transmitting. While receiving the microcontroller receives all the timer data and stores it for processing after a sufficient amount of time has passed without IR activity.

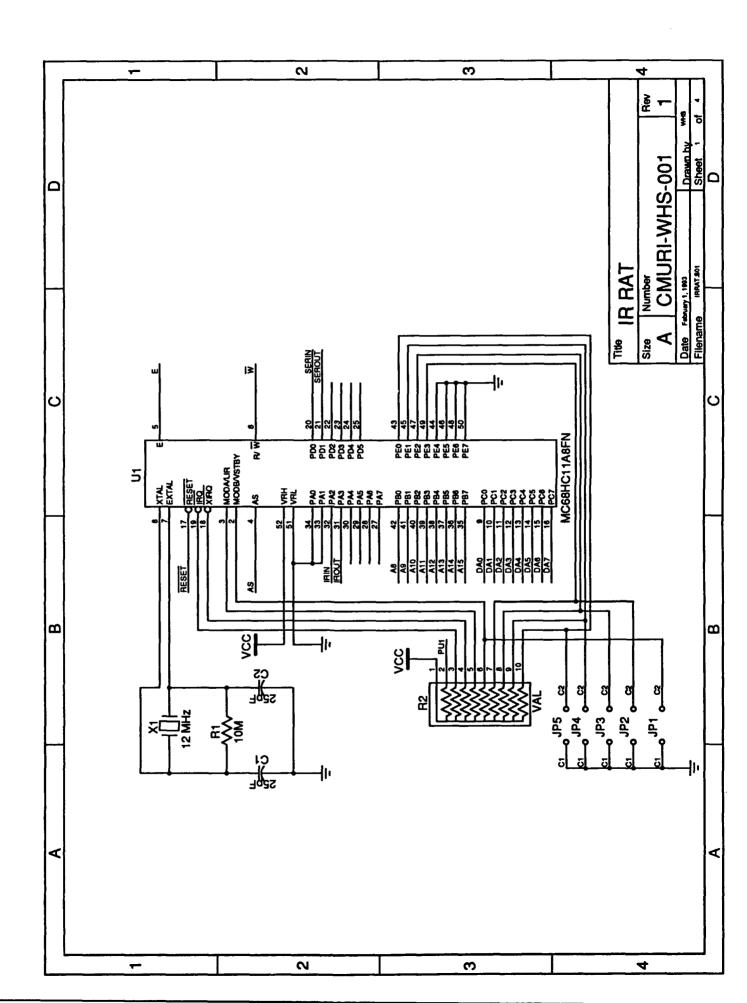


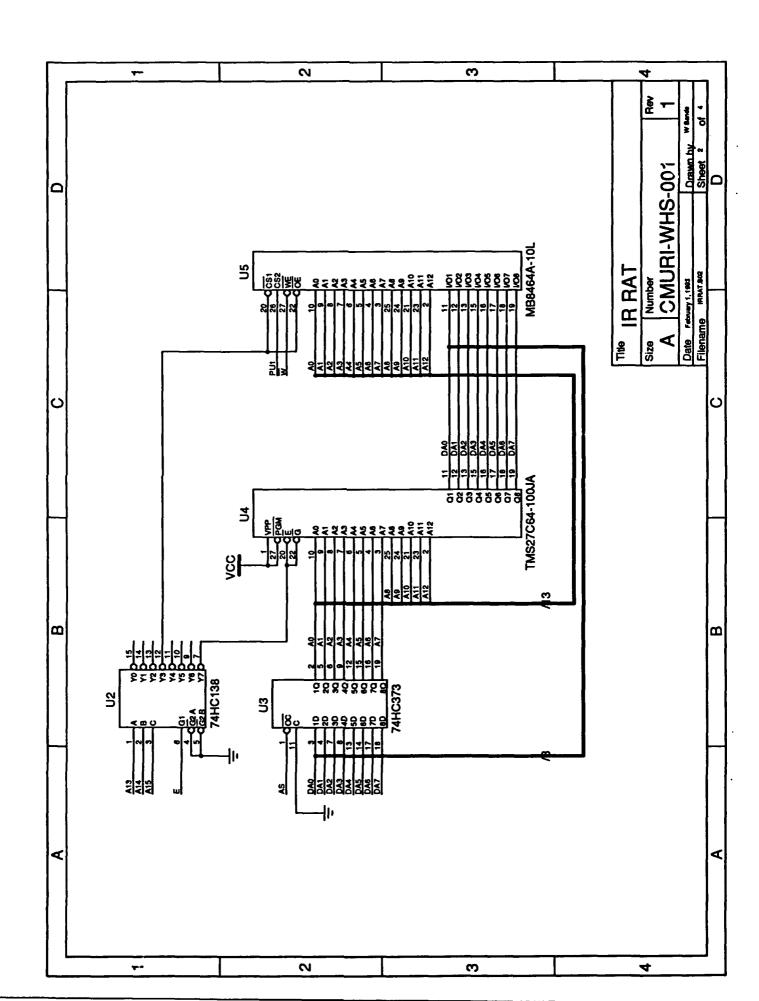

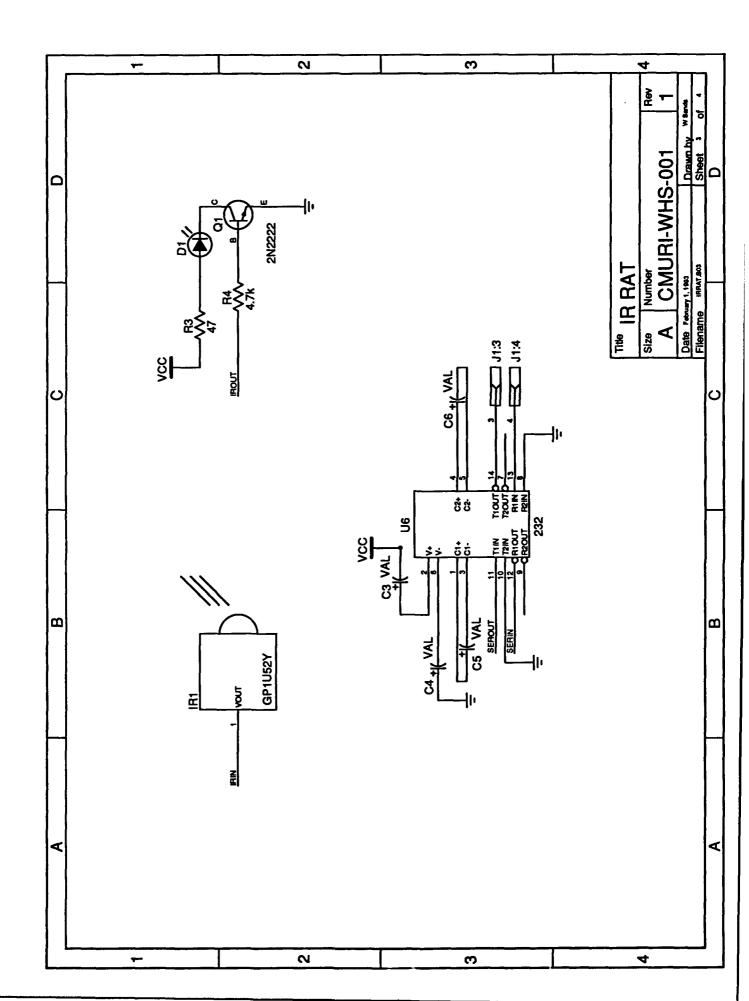

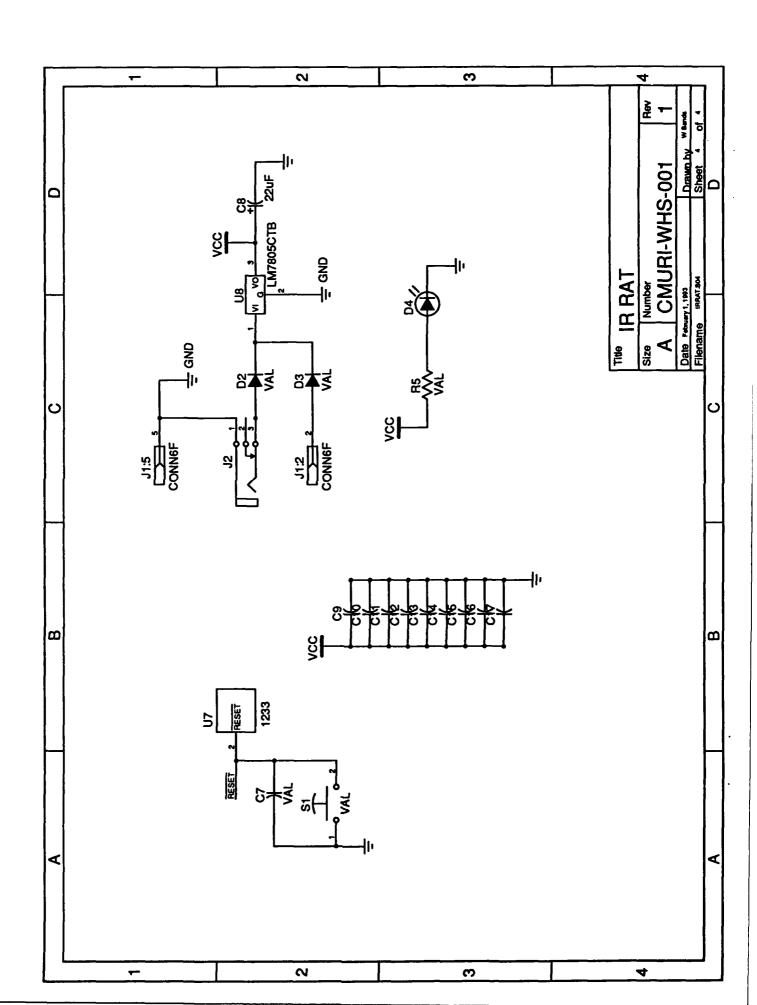

## Appendix B - Connector Diagrams

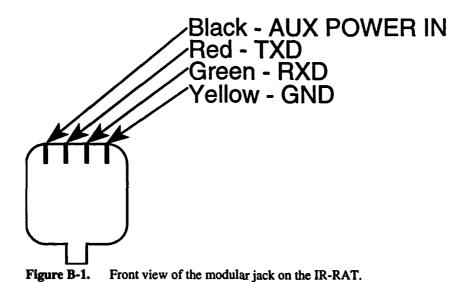

The other end of the modular plug wire can attach to a female dB-25 connector for use with most PCs. The wiring connections are as follows.

Modular Cable	dB-25	
YELLOW	Pin 7	
RED	Pin 3	
GREEN	Pin 2	
BLACK	Not Connected	

Additionally, for prototyping with Motorola's Buffalo monitor pins 5,6,8 and 20 should be shorted together.

## Appendix C - Single Chip Mode Board Modification

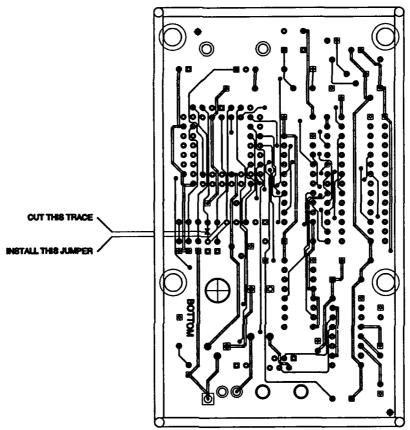


Figure C-1. This shows the necessary board modifications to allow jumpers 1 and 2 to control MOD B and A respectively.

#### Appendix D - Source Code for EPROM Ready Version

- \* IR-RAT SOURCE CODE EPROM VERSION of ratv2.s
- \* BY: William H. Sands IV whs@j.gp.cs.cmu.edu
- \* Created February 26, 1992
- \* Copyright (c) 1993 Carnegie Mellon University
- \* Following is the source code for the IR-RAT. This version
- \* is a complete version that can be compiled and loaded directly
- \* into EPROM. It is designed for EPROM at \$E000 \$FFFF.

#### \* Constants

BDRATE		EQU	\$30	\$31 for 4800,	\$30 for 90	500
TIMEDELAY	EQU	1		mS TO DELAY		
LONG	EQU	200				
SHORT	EQU	20				
BREAK_PT	EQU	100				

#### \* Memory map alias

RAMBS	EQU	\$1000	start of internal ram
EXRAMBS		EQU \$6000	start of external ram
REGBS	EQU	\$0000	start of registers
INTVECBS	EQU	\$FFD6	where interesting int vectors start

#### \* Registers

PORTA	EQU	REGBS+\$00	I/O port A
OCIM	EQU	REGBS+\$0C	
OCID	EQU	REGBS+\$0D	
TCNT	EQU	REGBS+\$0E	timer count
TIC1	EQU	REGBS+\$10	timer input capture 1
TOC1	EQU	REGBS+\$16	
TOC5	EQU	REGBS+\$1E	
TCTL1	EQU	REGBS+\$20	timer control 1
TCTL2	EQU	REGBS+\$21	timer control 2
TMSK1	EQU	REGBS+\$22	timer mask 1
TFLG1	EQU	REGBS+\$23	timer flag 1
TMSK2	EQU	REGBS+\$24	timer mask 2
BAUD	EQU	REGBS+\$2B	
SCCR1	EQU	REGBS+\$2C	
SCCR2	EQU	REGBS+\$2D	
SCSR	EQU	REGBS+\$2E	
SCDR	EQU	REGBS+\$2F	
HPRIO	EQU	REGBS+\$3C	highest priority interrupt
INIT	EQU	\$103D	_ <del>-</del>
OPTION	EQU	REGBS+\$39	

<sup>\*</sup>Internal memory allocations STACK EQU RAMBS+\$40

```
EOU
                RAMBS+$00
LOWMEM
HIMEM
          EQU
                RAMBS+SFF
          $E000
     ORG
                '(c) 1993 Television Computer Company.'
           FCC
copyrt
                'All rights reserved worldwide.'
           FCC
                                   whs@j.gp.cs.cmu.edu'
           FCC
                'By: W.H. Sands IV
                'February 26, 1993'
           FCC
*************
 RESET VECTOR - This is where eprom execution begins on any reset
               COP/CLOCK/EXT RESET/PWR UP etc.
*********
                           Set up sys configuration options (OPTION)
RESET
           LDAA #$13
                          A/D power off - LEVEL IRQs - 1s COP TIMEOUT
           STAA OPTION
           LDAA #$10
                                 Set RAM to $1000 and Registers to $0000
           STAA INIT
                                Mask all timer interrupts
           LDAA #$0
           STAA TMSK2
                                 Set the stack pointer
           LDS
                #STACK
                                 Set up the SCI Port
           JSR
                ONSCI
                                 Start execution
           JMP
                main
           ERRI JMP ERRI
           LDAA #$50
                                 This routine is the unknown interrupt
UNK_INT
                                 handler. Simply hangs the machine.
           TAP
                                 (necessary)
           STOP
           JMP
                UNK_INT
 PORTIONS OF OUTA, OUTSCI and ONSCI ARE FROM THE 6811 BUFFALO MONITOR V2.5
                                 Store variables, and put the
OUTA
           PSHA
                                  character out on the SCI
           PSHB
           PSHX
           JSR
                OUTSCI
           PULX
           PULB
           PULA
           RTS
                                Puts a character out on the SCI
OUTSCI
           BSR
                 OUTSCI2
           CMPA #$0D
           BNE
                 OUTSCI1
           LDAA #$0A
           BRA
                 OUTSCI2
           CMPA #$0A
OUTSCI1
           BNE
                 OUTSCI3
           LDAA #$0D
           LDAB SCSR
OUTSCI2
           BITB #$80
           BEQ
                 OUTSCI2
```

```
ANDA #$7F
STAA SCDR
RTS

*

ONSCI LDAA #BDRATE Initalizes the SCI (serial port)
STAA BAUD
LDAA #$00
STAA SCCR1
LDAA #$0C
STAA SCCR2
RTS
```

#### \*\*\* START OF ACTUAL IR RAT CODE \*\*\*

main	SEI		
marii		# cms crr	Deat stark maintan
	LDS	#STACK	Reset stack pointer
	LDAA		Turn on serial RDRF IRQ
	ORAA	#\$20	
	STAA	SCCR2	
	LDAA	#\$13	Make sure level sensitive IRQ
	STAA	OPTION	
	CLR	TCTL1	Discon. output pins from timer
	CLR	PORTA	Make sure IR LED is off
	LDAA	#\$30	Set input capture 1 to trigger
	STAA	TCTL2	on rising edge of signal
	LDAA	HPRIO	Set highest priority input to be
	ANDA	#\$F0	timer input capture 1
	ORAA	#\$08	
	STAA	HPRIO	
	LDAA	#\$04	Un-mask timer input capture 1
	STAA	TMSK1	
	STAA	TFLG1	
	LDX	#stoend	Point to where to store data
loop_temp	CLI		
	WAI		Go into waiting until an interrupt
	JMP	main	

#### \*\*\*\* RECEIVER \*\*\*\*

- \* This module receives the IR signal.
- \* When the IR receiver is activated, it causes an interrupt which
- \* forces execution to begin at timer\_irq. It will continute to look
- \* for data until it has filled memory, or it has lapped the timer.

timer_irq	LDX	#stoend	Point to where to store data
	LDD	TIC1	Get Timer Event Data
	STD	0,X	
	STD	TOC1	Reset the timeout timer
	LDAA	<b>#\$84</b>	Reset the interrupt flag
	STAA	TFLG1	
	LDAB	<b>#</b> \$80	Leave only the timeout IRQ
	STAB	TMSK1	unmasked

```
CLI
timer_irq1 DEX
            DEX
                                    Test for out of memory
           CPX
                  #stor1
           BLE
                  timeout
            BITA TFLG1
                                    Tight loop to check for IR
irq_loop
            BEQ
                                      activity
                  irg_loop
            LDD
                  TIC1
                                    Get Timer Event Data
            STD
                  0,X
            STD
                  TOC1
                                    Reset the timeout timer
                                    Reset the IR activity flag
            LDAA #$04
            STAA TFLG1
            BRA
                  timer_irq1
timeout
            BRA
                  timeout
                                    Endless loop for timing out
```

\* This interrupt routine is called when the timeout timer has lapped with

\* no IR activity. This is the post processing routine

```
Mask all timer events from IRQ
timeout_irq LDAA #$00
           STAA TMSK1
           LDAA #$80
                                    Reset Timeout flag
           STAA TFLG1
           STX
                 point
                                    Store the end of data
                                    Determine the freq of signal
           JSR
                  find_freq
           JSR
                                    Calculate the on/off cycles
                  on_off
           JSR
                  recog
                                    Perform recognition on signal
           PULX
                                   Pull this interrupt off the
           PULX
                                      stack
           PULX
           PULX
           PULA
           PULA
                                    Get CCR from stack
           ORA
                  #$10
                                    Set Interrrupt bit
           PSHA
                                    Put CCR back on stack
           LDX
                                    Hardcode a return to main
                  #main
           TSY
           STX
                  7,Y
           RTI
                                    Go back to main
```

\* Since we are dealing with a fixed frequency, this simply says that the

\* frequency if 50 cycles, which on a 2 MHz micro is 40 kHz.

```
find_freq LDX #$0032
STX freq
RTS
```

- \* This routine handles computing the values that represent the series
- \* of on/off cycles. Like the actual timer data, the on/off frequency
- \* values are stored from high to low memory. They are 16 bit values
- \* that terminate with a zero value. They represent the number of cycles
- \* that the signal is alternatively on and off.

```
Point to start of data
on_off
           LDY
                  #stoend
            STY
                  count
            DEY
            DEY
on_off_loop CPY
                 point
                                   Check to see if were at the end
                 finis
            BLE
            LDD
                  0,Y
                                   Find the difference between the
            SUBD 2,Y
                                      current value and the next.
                                    Goto the next timer event
            DEY
            DEY
                                   Determine the number of cycles that
           LDX
                  freq
                                     the difference represents
            IDIV
            LSLD
            CPD
                  freq
                                  Perform rounding of the number of
            BLT
                 no_round
                                    cycles
            INX
no_round
            PSHY
            LDY
                                   Store the results
                  count
            STX
                  0,Y
            DEY
            DEY
            STY
                  count
            PULY
            JMP
                  on_cff_loop
finis
                  #$0000
                                    When were done, store a 0000 as a
            LDX
                  count
            LDY
                                     tail
                  0, Y
            STX
            RTS
** This is the ending routine for recog. Needs to be here so that
** branches can access it.
                                  DELAY FOR X mS
end_delay
           LDX #TIMEDELAY
delay_bit
           LDY #199
delay_bit_1 LSLD
            DEY
            BNE
                  delay_bit_1
            DEX
            BNE
                  delay_bit
            RTS
* This is the recognition routine that determines if this is a IR-RAT
* signal and if it is sends the ASCII character over the serial port.
recog
            LDX
                  #stoend
            LDD
                  0,X
            CPD
                  #BREAK_PT
                                   First check from a long on pulse
            BGT
                  no_end_here
            JMP
                  end_delay
no_end_here DEX
```

```
DEX
           JSR
                  get_next
                  end_delay
           BGT
           JSR
                  get_next
           BLT
                  end_delay
           JSR
                  get_next
                  end_delay
           BGT
           JSR
                  get_next
           BLT
                  end_delay
           JSR
                  get_next
                  end_delay
           BGT
           CLRA
           CLRB
                                    No errors
            CLR
                  sma1
            LDY
                  #$0009
first_char LSRA
                                    Get first copy of the character
            ABA
            PSHA
            JSR
                  get_next_2
            PULA
            BLT
                  first_short
            CLRB
            BRA
                  first_long
first_short LDAB
                  #$80
first_long
           TST
                  sma1
                                     Didn't get the whole first char
                  end_delay
            BNE
            DEY
            BNE
                  first_char
            STD
                                     Temp storage for first character
                  point
                                     Temp storage for parity error
            CLR
                  ccunt
            JSR
                  comp_parity
                                     Check parity that was in B
            CMPB
                  point+1
            BEQ
                  no_par_error
            LDAA
                  #$01
                                     Record parity error on 1
            STAA
                  count
no_par_error CLRA
            CLRB
            LDY
                  #$0009
                                     Get second copy of the character
second_char LSRA
            ABA
            PSHA
            JSR
                  get_next_2
            PULA
            BGT
                  second_long
            CLRB
                  second_short
            BRA
second_long LDAB
                  #$80
second_short TST
                  sma1
                  par_2_err
            BNE
            DEY
            BNE
                  second_char
                                     temp storage for second character
            STD
                  freq
```

<pre>par_2_err  no_par_2_er: print_it end_delay_j</pre>	CMPB BEQ TST BNE LDD BRA LDD TST BNE CMPA BNE JSR	<pre>count print_it point end_delay_j OUTA</pre>	Check parity that was in B  both have parity errors second only has parity error  Get the second copy of character  First only has parity error - #2 Check first and second characters Characters are not same
get_next		0,X end_found	Gets the next time value, and checks to see if its at the end of the times
end_found	CPX BLT CPD RTS PULX JMP	<pre>#stor1 end_found #BREAK_PT end_delay</pre>	
<pre>get_next_2</pre>	LDD BEQ DEX DEX DEX CEX CPX BLT CPD RTS	<pre>0,X end_found_2  #stor1 end_found_2 #BREAK_PT</pre>	Gets the next time value, and checks to see if its at the end of the times  This version if for the bit checking
end_found_2		#\$FF sma1	Indicates truncated sig
comp_parity	LDY CLRB	#\$0008	Computes the actual parity of A and places it in the MSB of B to
parity_loop no_parity	BCC INCB DEY BNE	no_parity parity_loop #\$01 #\$0007	return
par_shift	LSLB		

```
DEY
           BNE
                par_shift
           RTS
*******
* TRANSMITTER
******
serial_irq LDAB
                SCSR
           LDAA
                SCDR
                                 Temp holder for character
           STAA point
           BITB #$20
           BEQ
                end_serial
           JSR
                comp_parity
           STAB freq
                                 Temp holder for parity
           JSR
                compute_sig
           JSR
                find_in_freq
           JSR
                flash
end_serial PULA
                                  Get CCR from stack
                #$10
           ORA
                                  Set Interrrupt bit
           PSHA
           LDX
                 #main
                                 Hardcode a return to main
           TSY
           STX
                7,Y
           RTI
compute_sig LDX
                 #stoend
                #LONG
           LDY
                                  Store long on pulse
           STY
                 0,X
           DEX
           DEX
           LDY
                #SHORT
           JSR
                 store_pulse
           LDY
                 #LONG
           JSR
                 store_pulse
           LDY
                #SHORT
           JSR
                store_pulse
           LDY
                #LONG
           JSR
                store_pulse
           LDY
                #SHORT
           JSR
                store_pulse
           LDAA point
           LDAB #$08
                                  Store first copy character
                 #SHORT
first_send LDY
           LSRA
           BCS
                 first_l_shrt
                                  It's a one (short)
first_l_lng LDY
                 #LONG
                                  It's a zero (long)
first_l_shrt JSR
                store_pulse
           DECB
           BNE
                 first_send
           LDY
                 #SHORT
```

```
TST
                  freq
                                    It's a one (short)
            BNE
                  con_p_first
            LDY
                  #LONG
                                    It's a zero (long)
con_p_first JSR
                  store_pulse
                 point
            LDAA
                                    Store second copy character
            LDAB #$08
second_send LDY
                  #LONG
            LSRA
            BCS
                  con_second
                                    It's a one (long)
                                    It's a zero (short)
second_l_lng LDY
                  #SHORT
con_second JSR
                  store_pulse
            DECB
            BNE
                  second_send
            LDY
                  #LONG
            TST
                  freq
                                    It's a one (long)
            BNE
                  con_p_second
                  #SHORT
                                    It's a zero (short)
            LDY
con_p_second JSR store_pulse
                  #$0000
            LDY
            JSR
                  store_pulse
find_in_freq LDX #$0032
            STX
                  freq
            RTS
            LDAA #$00
flash
            STAA
                  TMSK1
                                    turn off interrupts/etc
            STAA
                  TCTL1
                                    turn off control to port
init_flashing LDD TCNT
                                    Give some time to start
            ADDD #$100
            STD
                  TOC5
            CLR
                  PORTA
                                    turn off LED
                                    turn off OC1
            CLR
                  OC1M
            CLR
                  OC1D
            LDAA #$01
            STAA TCTL1
                                    Toggle on OC5
                                    Reset any interrupts pending
            LDAA #$F8
            STAA TFLG1
            LDX
                  #stoend
            STX
                  point
            LDD
                  freq
            LSRD
            STD
                  sma1
                  0,X
                                    get first on val
carrier_on LDY
            BEQ
                  done_flash
            DEX
            DEX
            STX
                  point
reset_on
            LDX
                  TOC5
            LDAB sma1+1
            LDAA #$08
on_flash
            BRCLR TFLG1 #$08
                                    on_flash
```

```
ABX
           STX
                 TOC5
           ABX
           STAA TFLG1
                                 off_flash
           BRCLR TFLG1 #$08
off_flash
           STX
                 TOC5
           STAA TFLG1
           DEY
           BNE
                 on_flash
                                   disconnect timer from pin
           CLR
                 TCTL1
                 point
           LDX
           LDD
                  0,X
           BEQ
                 done_flash
           LDA
                 freq+1
           MUL
            STD
                 count
           LDD
                  0,X
                  freq+1
           LDB
           MUL
           TBA
           CLRB
            ADDD count
            SUBD smal
            ADDD TOC5
                  TOC5
            STD
            LDAA #$08
            STAA TFLG1
            LDAA #$01
            STAA TCTL1
            DEX
            DEX
            STX
                  point
            BRA
                  carrier_on
                                    make sure interrupts are taken
            CLR
                  TCTL1
done_flash
                  PORTA
                                     care of and LED off before return
            CLR
                  TMSK1
            CLR
            RTS
store_pulse STY
                  0,X
            DEX
            DEX
            LDY
                  #SHORT
            STY
                  0,X
            DEX
            DEX
            RTS
*** Interrupt Vectors ***
      ORG
            INTVECBS
                                    serial_irq SCI Serial System
            serial_irq
      FDB
                                    SPI Transfer Complete
      FDB
            UNK_INT
```

```
Pulse Accumulator Input Edge
FDB
      UNK_INT
                              Pulse Accumulator Overflow
FDB
      UNK_INT
      UNK_INT
                              Timer Overflow
FDB
                              Timer Output Compare 5
      UNK_INT
FDB
                              Timer Output Compare 4
FDB
      UNK_INT
                              Timer Outout Compare 3
      UNK_INT
FDB
                              Timer Output Compare 2
FDB
      UNK_INT
                              Timer Output Compare 1
FDB
      timeout_irq
                              Timer Input Capture 3
FDB
      UNK_INT
                              Timer Input Capture 2
FDB
      UNK_INT
FDB
      timer_irq
                              Timer Input Capture 1
                              Real Time Interrupt
FDB
      UNK_INT
                              ~IRO
FDB
      UNK_INT
                              ~XIRQ
FDB
      UNK_INT
                              SWI
FDB
      UNK_INT
                              Illegal Opcode Trap
FDB
      UNK_INT
                              COP Failure
FDB
      RESET
                              COP Clock Monitor Fail
FDB
      RESET
FDB
      RESET
                              Reset Vector
```

#### \*\*\* Program RAM allocations \*\*\*

	ORG	STACK+2
sma1	FCB	0
	FCB	0
freq	FCB	0
	FCB	0
point	FCB	0
	FCB	0
count	FCB	0
	FCB	0
stor1	FCC	, ,
	ORG	HIMEM-1
stoen	i FCC	, ,

END